



Get to know myFirst Camera 50

USER MANUAL

Table of Contents

Introduction	1
About Your Camera 50	1
Getting Started	2
• Charging the Camera 50	
• Powering On/Off the Camera 50	
• Setting Up Your Camera 50	
Using Your Camera 50	3
• Basic Navigation	
• Taking Photos	
• Recording Videos	
• Selfie Mode	
Modules	5
• Gallery	
• myDiary	
• "+" Module	
• Music	
• myCircle	
Settings	10
• Account	
• Wi-Fi & Network	
• Language	
• Date & Time	
• Camera Settings	
• Sound Settings	
• Display Settings	
• Storage	
• myDiary Pincode Management	
Support and More	11
Disclaimer	11

Introduction

Thank you for choosing myFirst Camera 50. We hope you and your child enjoy the experience.

Box Contents



myFirst
Camera 50



Charging
Cable



Quick Start
Guide



Anti-lost
Strips

CAUTION: There is a risk of explosion if the battery is replaced with an incorrect type. Do not attempt to remove or replace the non-user-replaceable battery. If you encounter any issues with the battery, please contact customer support for assistance.

Before First Use

 
Please read this User Manual thoroughly before using the device.

 
Customer Support

For further information, visit our support page:

<http://support.myfirst.tech>.

About Your Camera 50

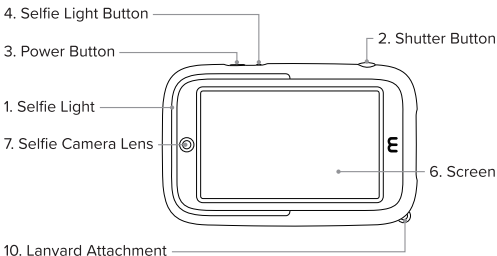

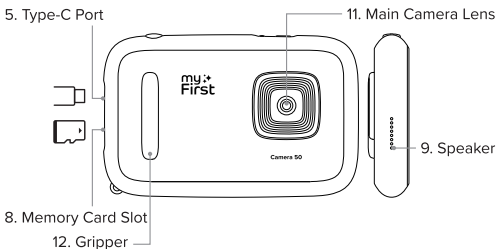

1. **Selfie Light:** Adjustable light for better selfies.
2. **Shutter Button:** Captures photos or starts/stops video recording.
3. **Power Button:** Press and hold to turn the camera on/off.
4. **Selfie Light Button:** Controls the selfie light.
5. **Type-C Port:** For charging and data transfer.
6. **Screen:** Displays photos, videos, and menus.
7. **Selfie Camera Lens:** For front-facing photos and videos.
8. **Memory Card Slot:** Insert a memory card for extra storage.
9. **Speaker:** Outputs sound during playback.
10. **Lanyard Attachment:** For attaching a lanyard.
11. **Main Camera Lens:** For rear-facing photos and videos.
12. **Gripper:** Provides a secure hold.

Getting Started

■ Charging the Camera 50

1. Use the Type-C Cable:

- Use a 5V/1A charging block with your Type-C cable.
- Connect the Type-C cable to the charging port of your Camera 50.

2. Verify Charging:

- Check the charging icon on the screen to ensure it is charging.
- When fully charged, the screen will display a fully charged status.

■ Powering On/Off the Camera 50

- Power On: Press and hold the power button until the logo appears.
- Power Off: Press and hold the power button again.

■ Setting Up Your Camera 50

 
1. Splash Screen:

Upon powering on, the Camera 50 displays the splash screen.




1. Splash Screen:

Upon powering on, the Camera 50 displays the splash screen.

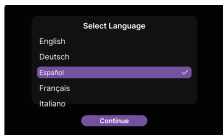


2. Select Language:

 Choose your preferred language from the list and tap Continue.

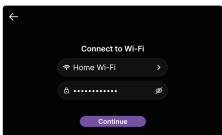

3. Wi-Fi Connection:

 Enter the Wi-Fi password to connect your Camera 50 to the internet.

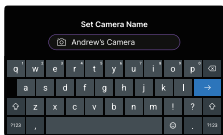

4. Set Camera Name:

Use the on-screen keyboard to set a unique name for your Camera 50.



 
 
5. Bind Camera:

Scan the QR code on the screen using your smartphone to link your Camera 50 with the myFirst Circle app.

add the existing circle registration app process content (new R2 user manual page1, 5,6)

Using Your Camera 50

Basic Navigation

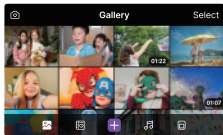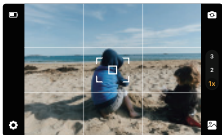

Power-On Default Mode:

Upon powering on, the Camera 50 immediately enters shooting mode.

Menu Access:

The menu provides direct access to core modules: Gallery, myDiary, Music, and myCircle.

■ Taking Photos



Photo Capture:

Press the shutter button to capture a photo.



Zoom Control:

Use the zoom button to toggle between 1x, 2x, and 3x zoom levels. For finer adjustments, press and hold the zoom control, then swipe to zoom.



Shutter Half-Press:

Half-pressing the shutter locks focus and exposure for more accurate shot

■ Recording Videos



Start Recording:

Long press the shutter button to start recording.

Stop Recording:

 
Press the shutter button again to stop recording.

■ Selfie Mode



Switch to Selfie Mode:

Tap the selfie icon to switch between the front and rear cameras.

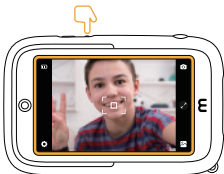


Use Selfie Light:

Press the side button to activate the fill light. Press again to adjust brightness.

Modules



■ Gallery

 1. Viewing Photos/Videos:

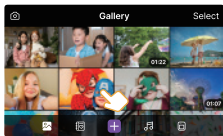

- Tap the photo icon to browse and view photos and videos.
- View photos or videos in full-screen mode by tapping on the desired media.

  2. Deleting Photos/Videos:

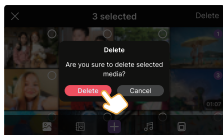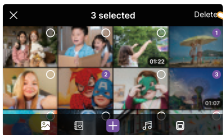

- Select the media, then tap the trash icon to delete.
- Confirm deletion for single or multiple files using the "select" option.

3. Editing Photos/Videos:


 
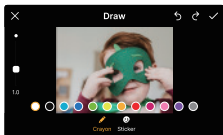 


Photo Editing:

 
- Apply filters (Auto fix, Vibrancy, Brightness, etc.).
- Use the crayon tool to draw, crop, or rotate the photo.

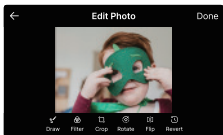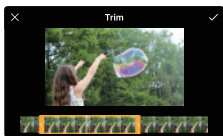

Video Editing:


- Trim video clips.

 myDiary

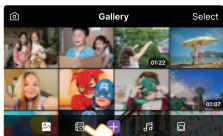

1. Accessing Saved AI Videos:

 
Open myDiary to view AI-generated videos that have been saved privately.



2. Saving to myDiary:


When creating or editing AI videos, select myDiary Privacy to save the content privately.

 3. myDiary Pincode Management:

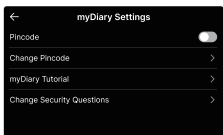

Access myDiary Settings:

 Navigate to Settings > myDiary Settings.

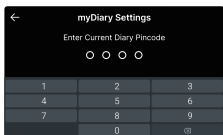


Change Pincode:


Select Change Pincode. Enter your old pincode, then set and confirm a new one.

"+" Module

 1. Template:

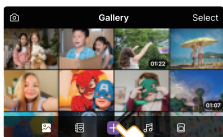


Tap the + icon to access templates.

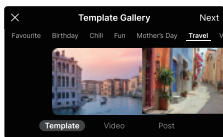 

Select a template from the Template Gallery.




 Choose the number of photos/videos as required by the template.


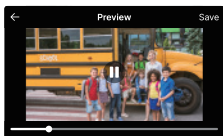


After selecting your media, tap the Generate button, the video will be processed and displayed in a preview screen.


 
Add Enhancements (Optional) :

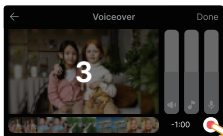

  Countdown to start voiceover when user clicked Record button

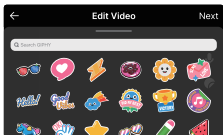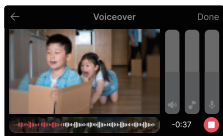


  After generating the video, you can add voiceover and stickers to enhance your creation.

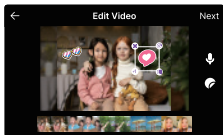


Once the media is generated, save it to myDiary or share it with your Circle.

 2. AI Video:

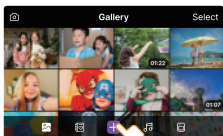


 Tap the + icon and select Video to start creating an AI video.

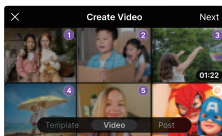


Select Media:

 Tap to choose your media for video generation.

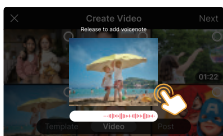


Select Media with Voicenote:

 Press and hold on media to express your feelings about the event.

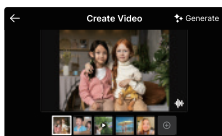


After selecting your media, tap the Generate button, the video will be processed and displayed in a preview screen.

 
Add Enhancements (Optional) :

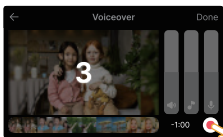

 
Countdown to start voiceover when user clicked Record button

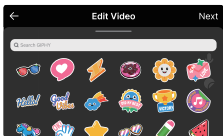


 
After generating the video, you can add voiceover and stickers to enhance your creation.

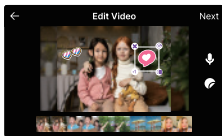

 
2. Post:

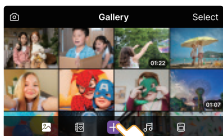

  Tap the + icon and select Post to create a post for myCircle.

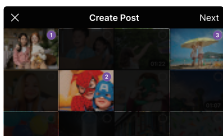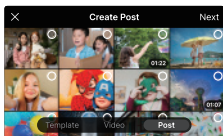

Choose up to 3 photos or one video.

 

Add a description, then post to myCircle.

 
Music

Playing Songs:




Insert a memory card with stored music or transfer music files from your computer to the Camera 50.

Only MP3 format is supported. Upon restarting or inserting a new memory card, the Camera 50 will automatically generate a "Music" folder. Then you can copy the music files into "Music" folder.

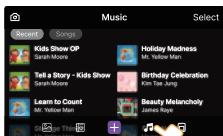

Tap the Music icon to browse and play songs from the list. You can pause, shuffle, and repeat tracks.

 myCircle

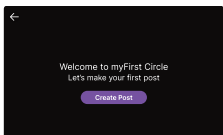

Viewing Posts from Contacts:

- Access myCircle to view posts shared by your contacts.
- Scroll through posts to view.

Settings

Account



Account

Not connected >

Manage Account:

View and link your Camera 50 with your myFirst Circle account.

Wi-Fi & Network



Wi-Fi

Not connected >

Connect to Wi-Fi:

Select and connect to a Wi-Fi network.

Language



Languages

English >

Change Language:

Choose your preferred language for the Camera 50 interface.

Date & Time



Date & Time

Jan 21, 2024 >

Set Date & Time:

Activate "Set Automatically" to synchronize date and time with the internet or set them manually.

Camera Settings



Camera >

Photo Resolution:

Select the desired photo resolution (e.g., 8MP, 12MP, 16MP).

Sound Settings



Sounds >

Sound Settings:

Adjust Sound: Modify the media volume and toggle system sound.

■ Display Settings

□ Display >

Set Brightness & Orientation:

Adjust screen brightness, lock screen orientation, and set the screen timeout duration.

■ Storage

📁 Storage >

Manage Storage:

Check available storage space.

■ About

ⓘ About

1.0.1 >

Software Version:

Make sure you update camOS, so you have the latest features and security updates.

Support and More

Customer Support:

Visit the myFirst website or contact support via email at support@myfirst.tech for assistance.

Disclaimer

Usage Terms:

myFirst is not responsible for the use of this device or third-party applications, products, and services, including any personal information shared with others. Review applicable terms, conditions, and policies before use.